




The first name in materials testing

25ST Extended height & speed range Electromechanical Materials Testing Machine

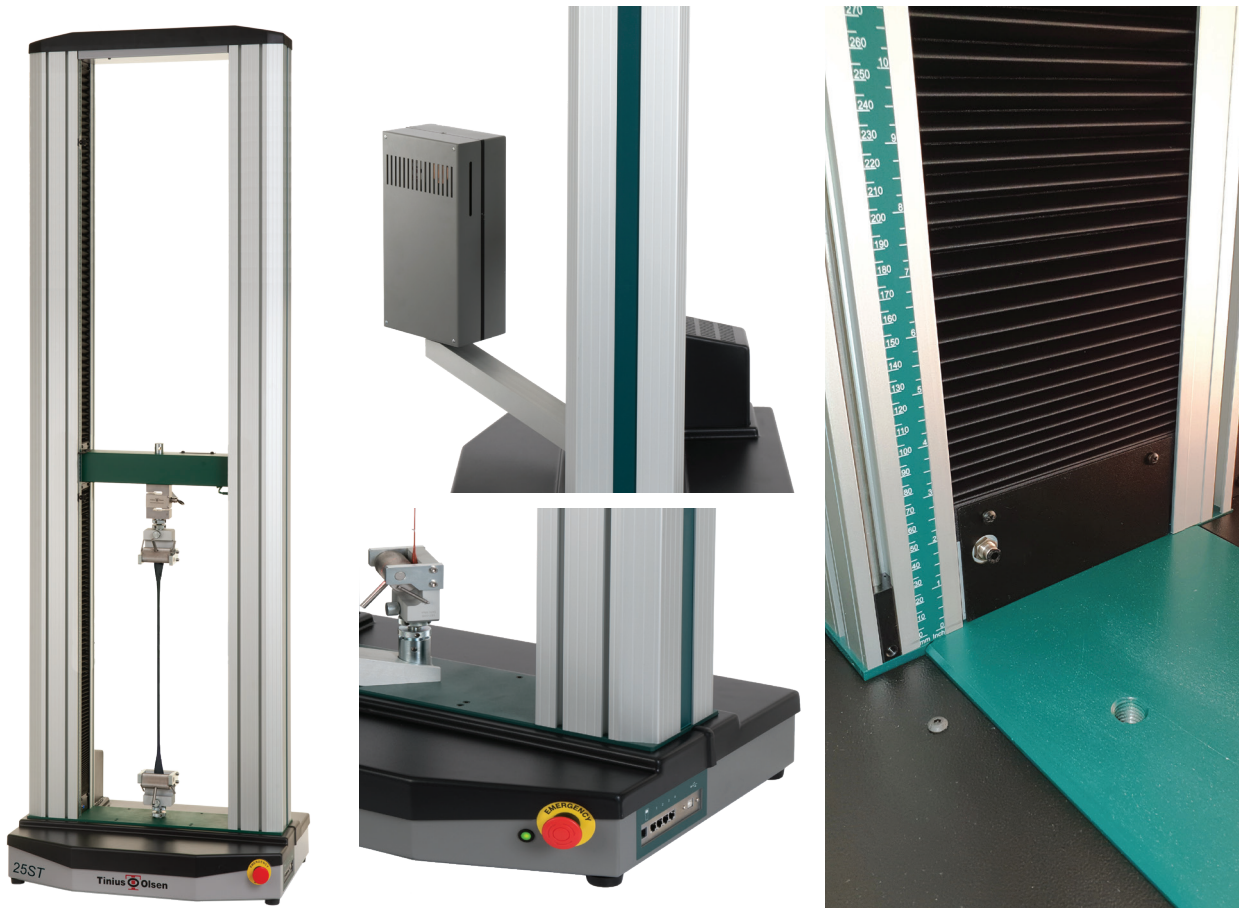

The model 25ST Extended height and speed range is a variation of the Tinius Olsen 25ST Electromechanical Materials Testing Machine. It is a robust design for use in a range of materials testing.



Model 25ST Extended height & speed range

The model 25ST has extended height and speed range and designed for tension, compression, flexure and shear strength testing on materials and assemblies. The robust design that incorporates quality materials and components ensures that our reputation for superior system performance, ease of use, and longevity is maintained. A variety of loadcells are available at differing capacities that give precise applied load measurements from the smallest test specimen to ones that go to full machine capacity. Test machines become complete, powerful test systems with the addition of grips to hold the specimen, strain measurement instrumentation and Tinius Olsen's Horizon Data Analysis software.

FEATURES AND BENEFITS

- **Extended crosshead travel (1490mm) & speed range (2500mm/min), 5kN**
- **Bluetooth-enabled handheld interface allows maximum flexibility when paired to a testing machine.**
- **Suitable for tension, compression, flexure, shear and other tests to a maximum force of 5kN/1,124lbf.**
- **Different system interface options are available, from a familiar tethered handheld interface, a wireless Bluetooth interface panel running an Android application, or virtual machine controller application running on a PC. All interfaces work with Horizon Data Analysis software.**
- **Meets or exceeds the requirements of national and international standard for materials testing systems.**
- **Eight full-length T slots built into the machine column to allow accessories to be securely mounted to the test frame.**
- **Built-in pneumatic distribution ports provide local air supply to pneumatic grips.**

INTERFACE OPTIONS

HMC 3.0


Wireless handheld interface that is connected to the machine by a Bluetooth link.

The interface features an Android-based operating platform and can be used to control the machine by itself or in conjunction with Tinius Olsen's Horizon software.



Proterm

Familiar handheld interface that is tethered to the machine. With its larger, tactile, sealed keypad, this interface is ideal for operators who use gloves to load and unload specimens and prefer a push button keypad. It requires virtual machine control software running on a connected PC to operate the basic machine functions and report basic numerical test data.

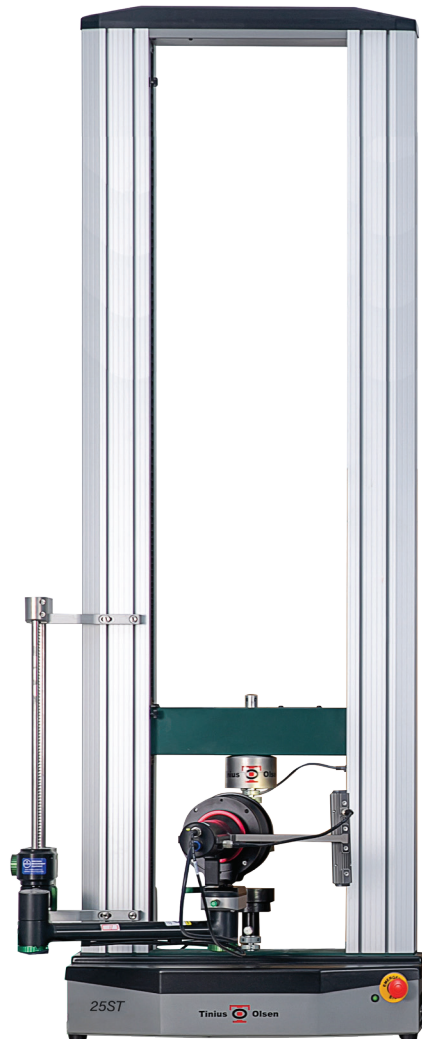

APPLICATIONS

Most common application for this particular model includes (but not limited to)

- Rubber
- Plastic pipes
- Large tall components
- Heavy plastic sheet

Tinius Olsen



www.tiniusolsen.com

- Horsham, PA, USA
- Redhill, Surrey, UK
- Noida, UP, India
- Shanghai, PR China